

## **Addendum to MH-2000 Manual for Revision "16" Programs. 6/1/01**

### **Adjustable Features and Settings**

The following Custom Features have pre-assigned uses:

- "CUSTOM TIME 1.1" is the Flash Rate for the Fire Light on 1998 ANSI Code, if the Machine Room or Hoistway Fire Sensors are energized. The default setting is 2.0 seconds.
- "CUSTOM TIME 3.3" is the delay before shutting off the Position Indicators. The default value is 30, which is equal to 300 seconds or 5 minutes.
- "CUSTOM FEATURE 1" will disable the timed shut off of the Position Indicators. Enable this feature to keep the Position Indicators on at all times.
- "CUSTOM FEATURE 2" will disable the shortened Door Time from the Door Close Button. With this feature disabled, the Door Close Button will drop the Hall Call Door Time (usually 5 seconds) to the Shortened Door Time (usually 1 second) when the Door Close Button is pressed. With this feature enabled, then pressing the Door Close Button will shorten the Hall Call Door Time to the Car Call Door Time (usually 3 seconds).
- "SPECIAL FEATURE 1" will allow the Emergency Stop Switch Bypass Output to drop after the car has returned to the Main Landing. Most codes required that this feature be disabled (default)
- "SPECIAL FEATURE 2" will prevent the Shunt Trip operation on Fire Service Phase 2, if provided. The default is disabled, which will allow Shunt Trip on Fire Service Phase 2.

Some installations require specific settings or features that are not included in the standard program. In this case, a separate sheet (or sheets) will be provided that describe the operation of these settings or features, and what the factory default settings are.